


AERODROME CHART

ATIS - 124.6		CLNC DEL - 121.4			TWR - 118.7 (S) 119.55 (N) 226.5		DEP - 126.12 (N) 132.3 (S) 363.8	
		GND - 121.7 (S) 127.15 (N) 275.8						
DECL DIST	08R	26L	08L	26R	13	31		
TORA	11500	11493	9941	9941	7300	7300		
TODA	12484	17239	11417	14911	8284	8284		
ASDA	11500	11493	9941	9941	7300	7300		
LDA	10804	10804	9941	9941	7300	7300		

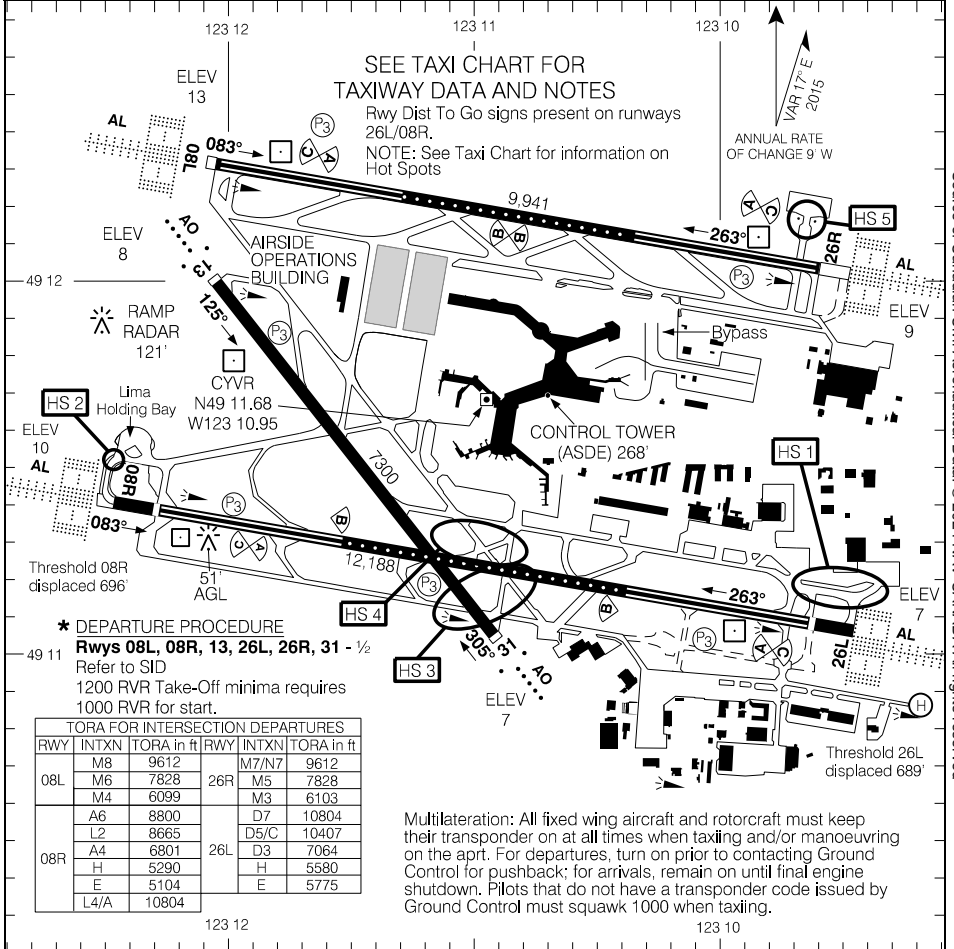

**\* DEPARTURE PROCEDURE**  
**Rwys 08L, 08R, 13, 26L, 26R, 31 - 1/2**  
 Refer to SID  
 1200 RVR Take-Off minima requires 1000 RVR for start.

TORA FOR INTERSECTION DEPARTURES					
RWY	INTXN	TORA in ft	RWY	INTXN	TORA in ft
08L	M8	9612	26R	M7/N7	9612
	M6	7828		M5	7828
	M4	6099		M3	6103
	A6	8800		D7	10804
08R	L2	8665	26L	D5/C	10407
	A4	6801		D3	7064
	H	5290		E	5580
	L/A	10804		H	5775

Multilateration: All fixed wing aircraft and rotorcraft must keep their transponder on at all times when taxiing and/or manoeuvring on the aprt. For departures, turn on prior to contacting Ground Control for pushback; for arrivals, remain on until final engine shutdown. Pilots that do not have a transponder code issued by Ground Control must squawk 1000 when taxiing.

RUNWAY LEVEL OF SERVICE	
RVO	LVO
RWY 08L, 08R, 26L, 26R: RVR 1200	RWY 08L, 08R, 26L, 26R: RVR 600
TAKE-OFF MINIMA	
All Rwys: *	

